

SLA-7ND

SLA-RL7ND MILWAUKEE BATTERY POWER | SLA-MK7ND MAKITA BATTERY POWER

6 TON BATTERY OPERATED INLINE COMPRESSION TOOL

OPERATOR MANUAL





WARNING To reduce the risk of injury, user must read and understand manual completely before first using this product and save this manual for future use

118

Huskie Tools is not affiliated with, authorized, or endorsed by Milwaukee Electric Tool Corporation. Milwaukee listed batteries and chargers are being re-sold by Huskie Tools. Milwaukee M18th REDLITHIUMth are registered trademarks of Milwaukee Electric Tool Corporation. Huskie Tools is not affiliated with, authorized, or endorsed by Makita* Corporation. Makita* listed batteries and chargers are being re-sold by Huskie Tools. Makita* and LXT* are registered trademarks of Makita* Corporation.



Huskie TOOLS_®

BUILT FOR EVERYTHING THAT'S ON THE LINE."

HUSKIETOOLS.COM

PRE-USE CHECKLIST:

- Visually confirm there are no missing or broken components. If found, stop use and have the tool checked by a qualified technician.
- Check and ensure triggers are moving freely with no binding.
- Rotate head where applicable to ensure it rotates 180 degrees. If head rotates more than 180 degrees, stop use and have tool checked by a qualified technician.
- Please read the instructions supplied with the battery and charger. Make sure to use supplied batteries or batteries that do not exceed 5.0Ah




Thank you for purchasing a Huskie Tools product.

Our mission is to supply the finest cable connecting and cutting tools and cablerelated products to the transmission and distribution markets. Huskie Tools products will represent state-of-the-art tools and be dependable and safe.

TABLE OF CONTENTS

MODEL: SLA-7ND

Description	4
Safety Symbols	5
Safety Information	6
Operating Instructions	7
Troubleshooting Guide	8
Warranty Information	9

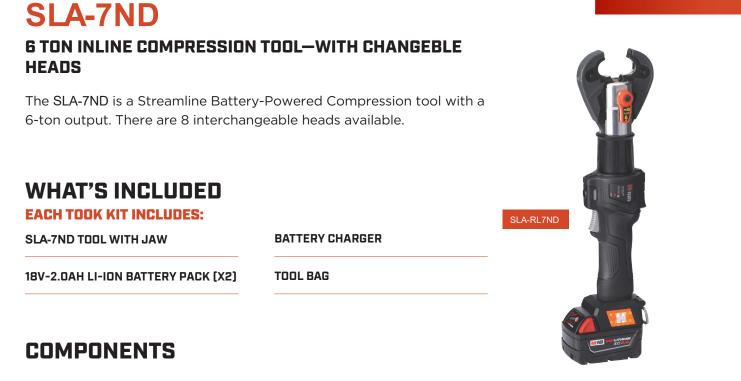

COMPRESSION JAW (D3 SHOWN)

INTEGRATED LED WORK LIGHT

RELEASE TRIGGER

USER INTERFACE PANEL

18V - LI-ION BATTERY

ADVANCE TRIGGER

SERIES

SELECTABLE AUTO-RETRACT SWITCH

SPECIFICATIONS

CUTTING CAPACITIES			CONNECTOR RANGE		SPECIFICATIONS		
	EVS-ACSRJAW	EVS-CUALJAW	SLGW-JAW	LUGS & SPLICES	#8 to 500 MCM Cu	CRIMP FORCE	6 Ton
Copper	Up to 350 MCM	Up to 750 MCM	Up to 4/0		#8 to 350 MCM AI	WEIGHT	6.90 lbs
Aluminum	Up to 350 MCM	Up to 1" O.D.	Up to 4/0	H-TAPS	Up to 4/0-4/0	DIMENSIONS	47.5% 0.75% 0.75%
ACSR	Up to 556 MCM	Do Not Cut	Up to 4/0			DIMENSIONS 17.5" x 3.75" x 2.75" (H X L X W) 17.5" x 3.75" x 2.75"	
EHS Guy Wire, Soft Locks, Soft Steel Bolts	Do Not Cut	Do Not Cut	Up to 3/8″ Dia.			Note: Weight and Dime	ensions taken w/o battery

OPTIONAL JAWS (ORDER SEPARATELY)



Huskie Tools is not affiliated with, authorized, or endorsed by Milwaukee Electric Tool Corporation. Milwaukee listed batteries and chargers are being re-sold by Huskie Tools. Milwaukee® MI8[™] REDLITHIUM[™] are registered trademarks of Milwaukee Electric Tool Corporation. Huskie Tools is not affiliated with, authorized, or endorsed by Makita® Corporation. Makita® listed batteries and chargers are being re-sold by Huskie Tools. Makita® and LXT® are registered trademarks of Makita® Corporation.

SAFETY SYMBOLS

You will see this symbol A Exclamation-Triangle throughout this manual. This purpose of this symbol is to call your attention to hazards and/or unsafe practices that have the potential to cause injury or property damage. The severity of each hazard is further explained in detail below. Failure to follow all instructions may result in electric shock, fire and/or serious injury. The term "power tool" in all warnings refers to your battery operated (cordless) power tool.

DANGER


Immediate hazards are present which will result in severe injury or death if not avoided.

Hazards or unsafe practices may result in injury or property damage if not avoided.

Hazards or unsafe practices may result in injury or property damage if not avoided.



Read all instructions and safety information detaile d in this operator manual prior to operating or servicing this tool. Failure to observe this warning could result in severe injury or death.

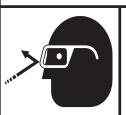

Wear Eye Protection: Use safety glasses when operating or servicing this tool to prevent eye injury from flying debris.



Electric Shock Hazard: Use appropriate personal protective equipment when using this unit on or near energized electrical lines.



Pinch Point Hazard: Remove battery before servicing. Keep hands away from crimping head during cycle.



Cutting Hazard: Remove battery before servicing. Keep hands away from cutting head during cycle.



DO NOT DISCARD THIS PRODUCT OR THROW AWAY!

FOR RECYCLING INFORMATION, CONTACT 800-822-8837

SAFETY INFORMATION

WORK AREA SAFETY

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep bystanders away while operating a power tool. Distractions can cause you to lose control.

PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of distraction while operating power tools may result in personal injury.
- Use personal protection equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

TOOL USE AND CARE

- To prevent leakage, overheating, smoke generation, fire, and rupturing from occurring, follow these instructions when handling our rechargeable power tools (tool main body/battery pack/charger).
- Do not force the tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it was designed.
- Do not use the tool if the switch does not turn it on and off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the battery pack from the tool before making any adjustments, changing accessories, or storing. Such preventive safety measures reduce the risk of starting the tool accidentally.
- Store idle tools out of the reach of children and do not allow persons unfamiliar with the tool or these instructions to operate the tool. These tools can be dangerous in the hands of untrained users.
- Maintain tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the tools operation. If damaged, have the tool repaired before use.
- Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Under abusive conditions, liquid may be ejected from battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

OPERATING INSTRUCTIONS

COMPRESSION

- 1. Select an appropriate size of die for the connector.
- 2. Insert the dies into the jaw by pressing the push pins. When released, they will hold the die in place. (Figure 1)
- 3. Place the connector between the dies and press the trigger to advance the ram so that the connector is held between the dies and insert conductor into the terminal.
- 4. Press and hold the trigger until the compression is completed. (Figure 2) The ram will advance and once the cycle is complete, the tool will automatically shut off. If the cycle was not completed, the LED work lights will flash rapidly alerting the user the cycle was not completed.
- 5. The ram will automatically return once trigger is released when in **Auto-Retract** mode. If the switch is in in manual mode, the release trigger will need to be depressed to retract the ram.



Figure 1





Push and Rotate to release

Pin Released

Jaw Removed

TROUBLESHOOTING GUIDE

BEFORE YOU BEGIN

- 1. Make sure that the battery is charged and is a 5.0Ah or below. Recheck the battery after several minutes to make sure the battery is holding its charge.
- 2. Use a nonflammable contact cleaner or pencil eraser to clean the electrical contacts on the battery and tool.
- 3. Reinstall the battery and check the tool again.

SLC-RL7ND			
PROBLEM	CAUSE	SOLUTION	
	Insufficient hydraulic oil	Consult factory for repair service	
Motor runs but the tool jaws will not advance	Air block in hydraulic system	Invert tool to allow air to rise towards the top of the oil bladder	
	Defective hydraulic circuit	Consult factory for repair service	
Motor runs, tool jaws advance, but will not build	Insufficient hydraulic oil	Consult factory for repair service	
pressure	Defective suction valve or bypass cartridge	Invert tool to allow air to rise towards the top of the oil bladder	
	Defective battery	Charge or replace battery	
Motor will not run at all	Bad contact or loose battery connections	Check all connections and wires	
Motor will not run at all	Misaligned switch	Check to make sure that switch is properly aligned with trigger	
	Thisding field switch	Consult factory for repair service	
	Tool did not complete a full cycle and bypass	Press trigger and allow tool to bypass, then release tool jaws	
Tool jaws will not release	Connector is jammed in tool jaws	Press and hold release trigger while prying tool jaws apart	
	Release trigger is bent or misaligned	Consult factory for repair service	

WARRANTY INFORMATION

SL/SLA-SERIES BATTERY OPERATED PRODUCTS	5 YEARS
REC-SERIES BATTERY OPERATED PRODUCTS	5 YEARS

BATTERIES

CHARGERS

The warranty does not cover any damages incurred from a Huskie tool including damages to property, bodily injuries and lost wages resulting from such injuries. This warranty solely covers the repair or replacement of tools supplied by Huskie. These remedies are exclusive, and the total liability of Huskie Tools, LLC whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the tool. In no event, shall Huskie Tools, LLC be liable for consequential, incidental or special damages.

HUSKIE TOOLS, LLC MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

Huskie reserves the right to determine all warranty claims. Huskie will not warranty tools containing parts or batteries not originally supplied by Huskie. Failure due to misuse, improper maintenance, misapplication, not following instructions or warnings, abuse or repairs attempted by anyone other than Huskie Tools, LLC, or an authorized service center renders this warranty null and void.

REPAIR AND WARRANTY CLAIMS

All claims must be sent to Huskie for inspection and authorization. A Return Goods Authorization (RGA) is required before shipping tools to Huskie. Secure the authorization by telephoning or writing to Huskie's main office with details of the claim. Non-warranty repairs are handled using the same procedure. Repairs exceeding 50 percent of the cost of a new tool will be advised before repairs are made.

3 YEARS

3 YEARS

MAINTENANCE NOTES

MAINTENANCE NOTES



2105 Corporate Dr. Unit B Addison, IL 60601 PHONE 800-860-6170 FAX 800-345-3767

HUSKIETOOLS.COM